
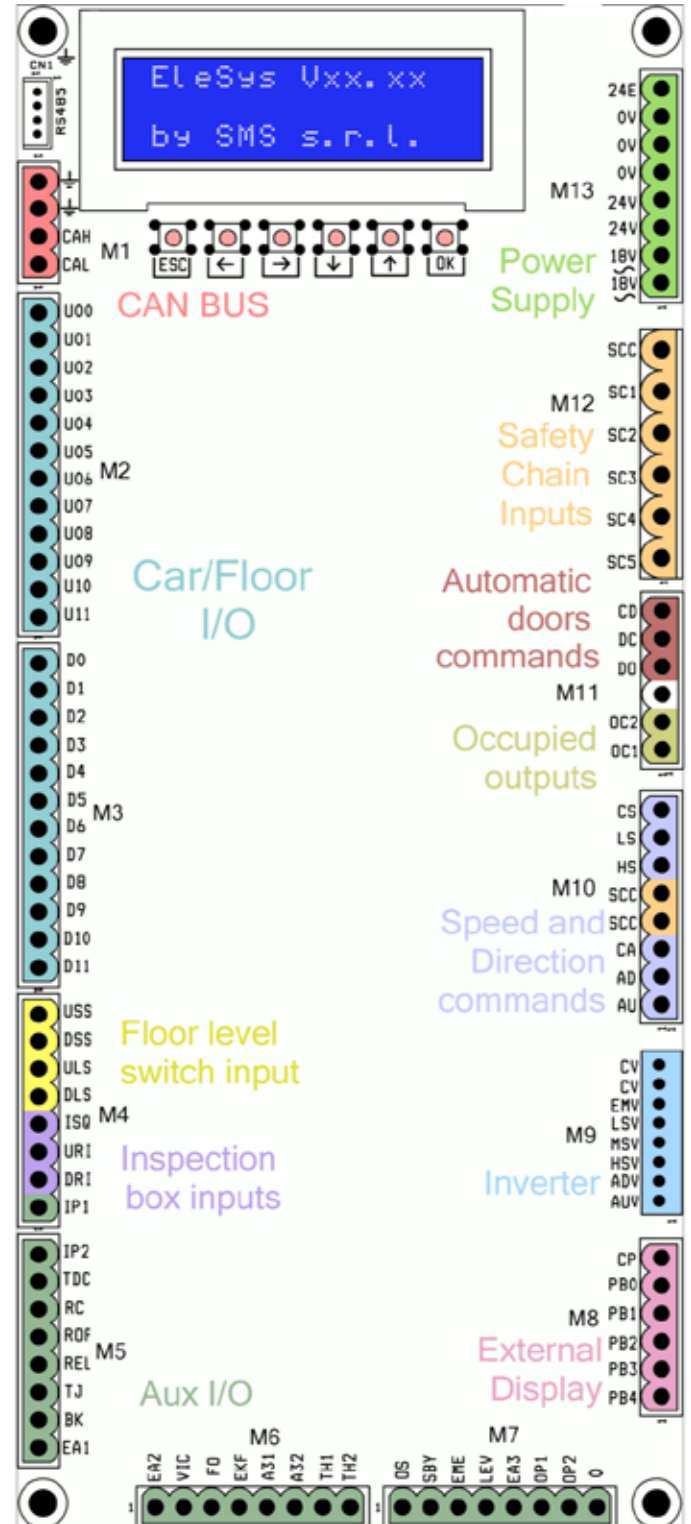


For Rope and Hydraulic Lifts  
A.P.B or Collective Operation

# ELEMPU CONTROL BOARD

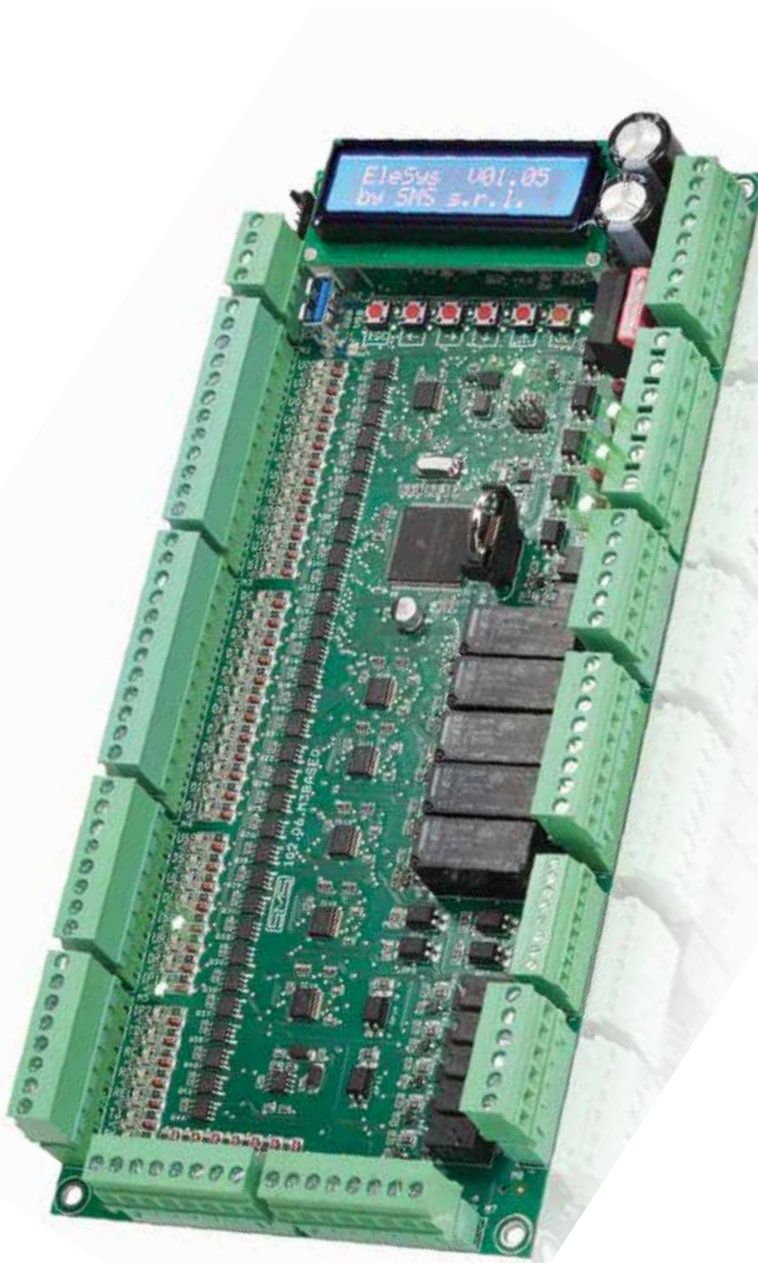


**MADE  
IN  
ITALY**

**SMS**

VERSION 1.0

**QUICK GUIDE**

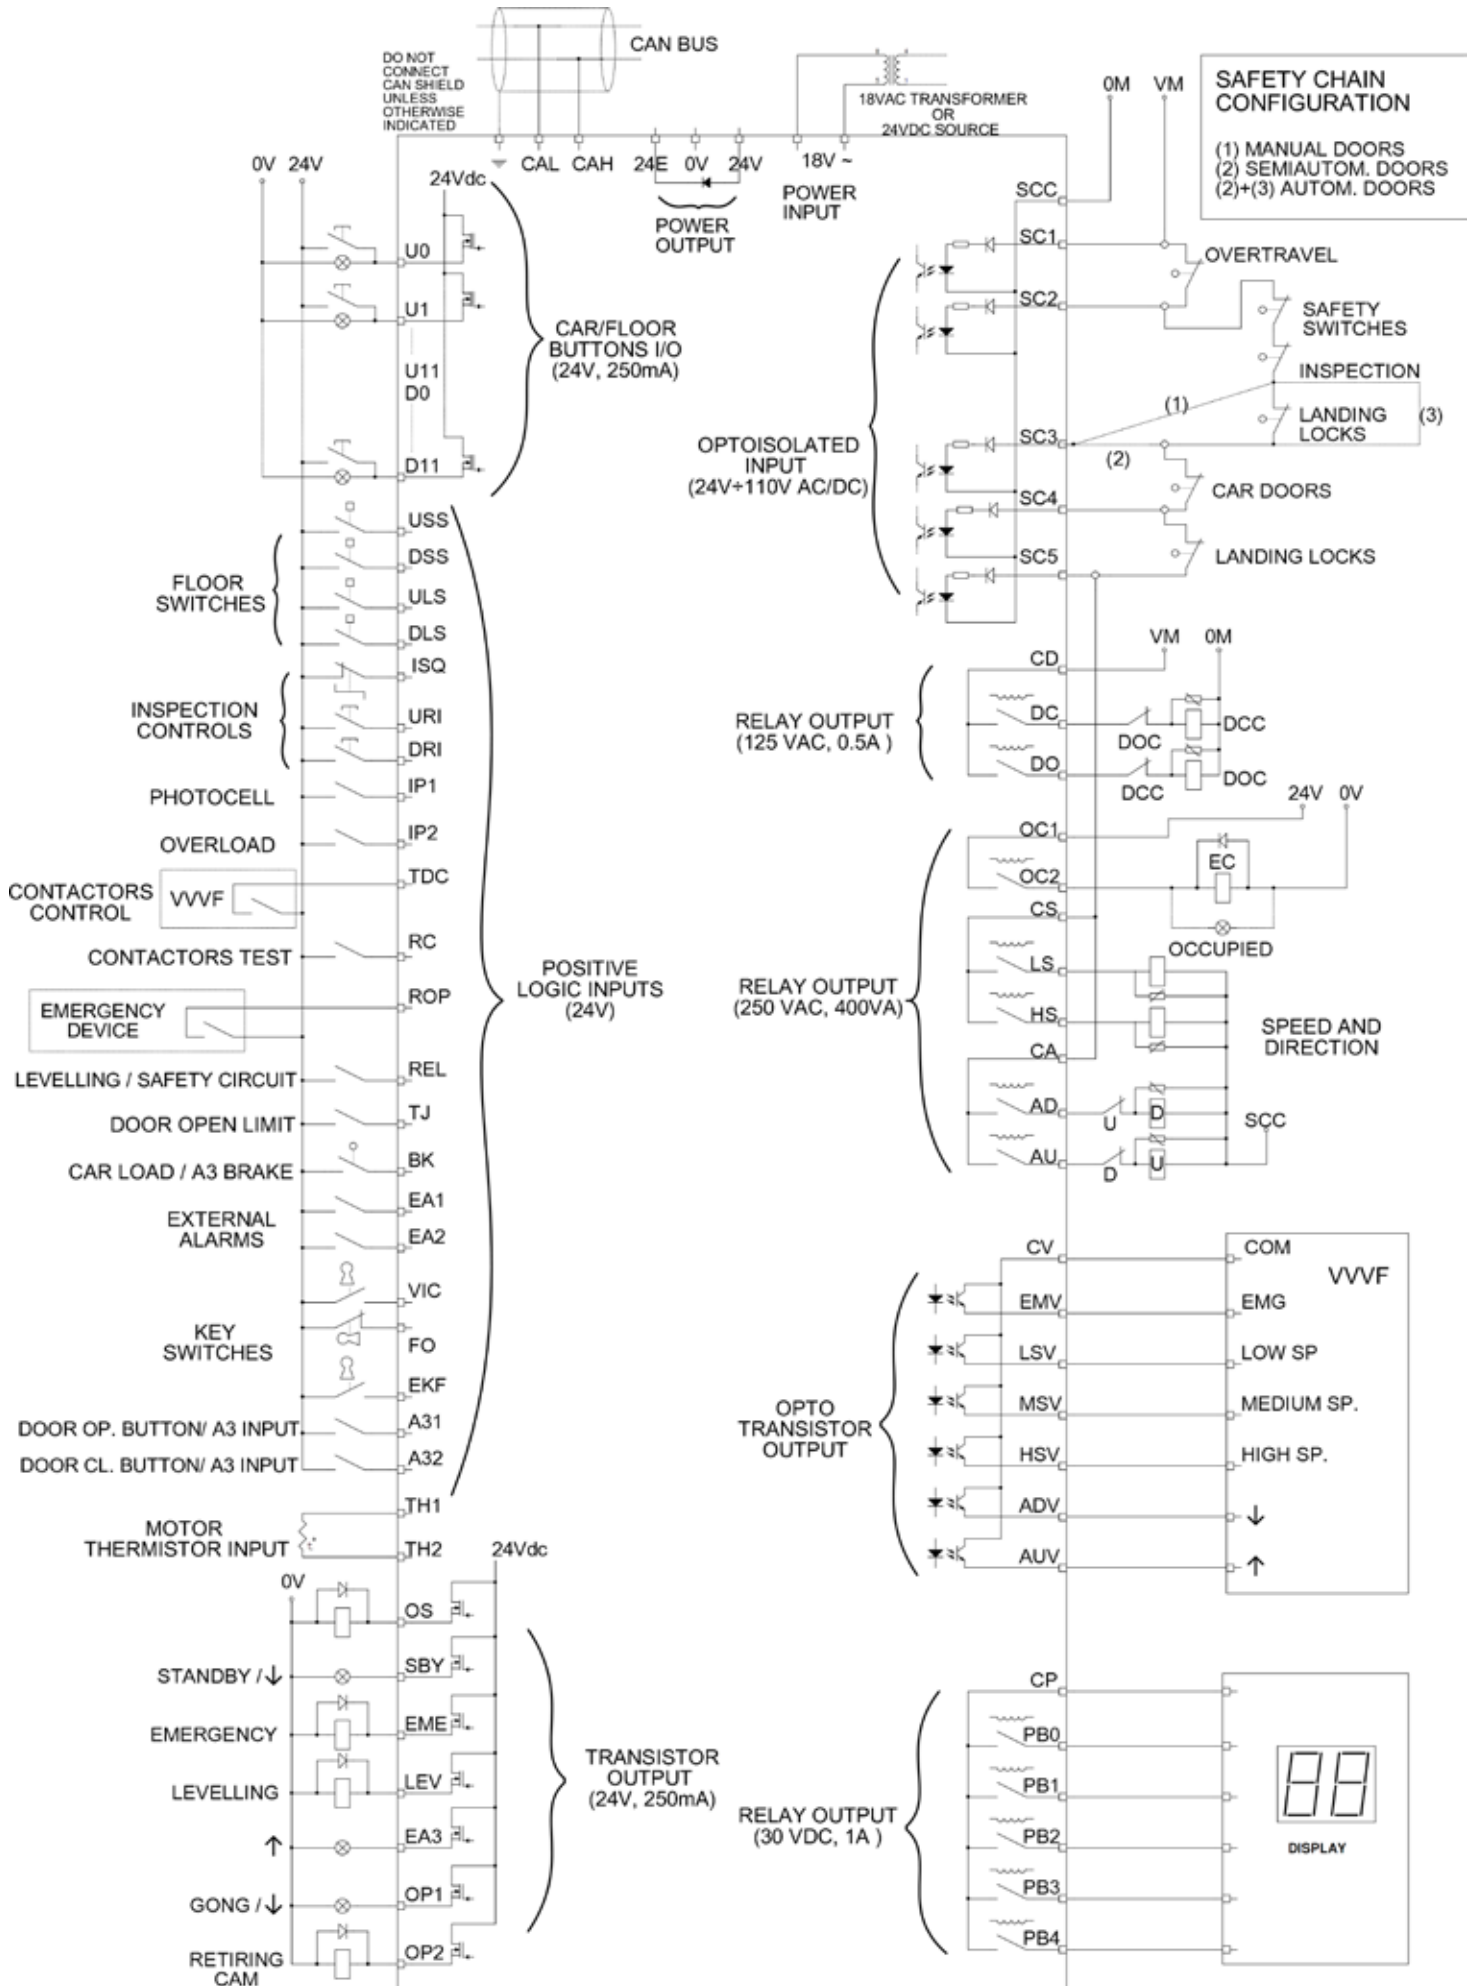

**POWER ON**  
SOFTWARE VERSION


**AUTO MODE**  
**OK: PROGRAMMING MENU**

**PROGRAMMING MENU**  
↑ OR ↓: MENU NAVIGATION  
**OK** : ENTER, SAVE  
**ESC**: EXIT, RETURN TO AUTO

**DIAGNOSTIC**  
ERRORS ARE DISPLAYED.  
**OK** : DETAILS  
← AND →: CLEAR

**ALARM DETAILS**  
↑ OR ↓: ALARMS NAVIGATION  
← AND →: CLEAR  
**ESC**: EXIT

**EDIT FUNCTIONS**  
→: EDIT  
←: UNDO  
**OK**: SAVE

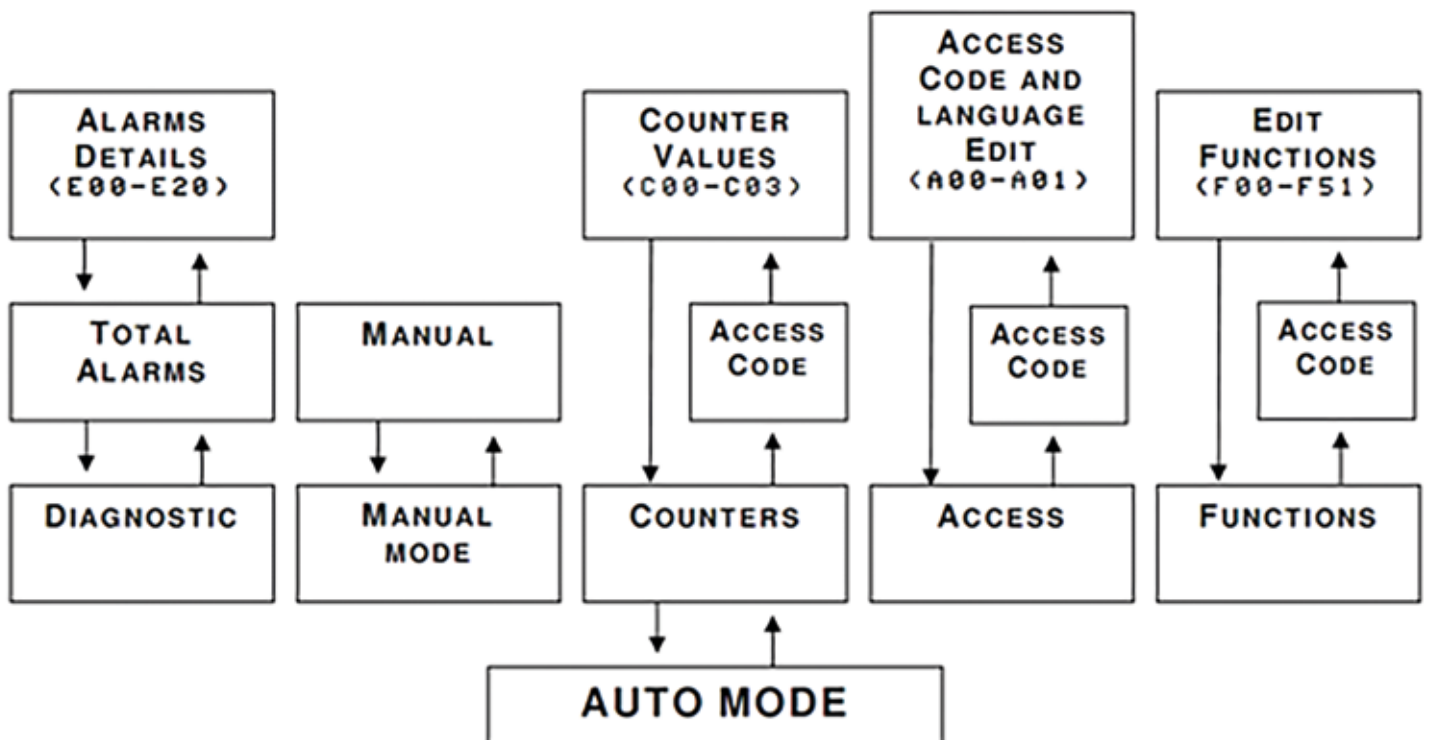

SMS Sistemi e Microsistemi Srl disclaims all responsibility further to incorrect use of information or diagrams reproduced in every document, and cannot be held responsible for any errors or oversights, or for the consequences of using information and diagrams contained or retrieved from this guide. Reproduction of all or part of an Application Guide, User Manual connection diagram is authorised only with the prior consent of SMS Sistemi e Microsistemi Srl.

All possible contingencies which may arise during installation, operation or maintenance, and all details and variations of our equipment do not purport to be covered by the instructions retrieved from this guide. If further information is desired by purchaser regarding these documents, particular installation, operation or maintenance of our equipment, SMS Sistemi e Microsistemi Srl. should be contacted.

All the information in the catalogue are indicative and can change without notice.

Our policy is under continuous development. Accordingly the design of our products may change at any time.

**COMPLETE USER MANUAL CAN BE DOWNLOADED  
ON OUR WEB SITE [www.sms-lift.com](http://www.sms-lift.com)**



**For further technical question contact  
[assistenza@sms.bo.it](mailto:assistenza@sms.bo.it)**